

# INSTRUCTIONS

**IMPORTANT:** Please completely understand all user instructions and safety information before using this product.



## 1. Ensure inflator valve is closed


Turn inflator valve clockwise until it is fully closed.



## 2. Connect cartridge to inflator

Thread in cartridge clockwise quickly to puncture cartridge

\*Do not activate a CO<sub>2</sub> cartridge until ready to use.

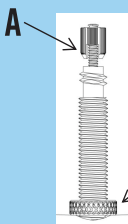

## 3. Unscrew valve stem knob (Presta valve only)

**NOTICE:** When pressing the **NANOFLATOR** onto Presta Valves:

**A.** Check that the valve is fully open by turning the valve counter-clockwise at the end of the stem (See diagram).

**B.** Ensure that the locking nut is tightened at the base of the stem to keep the stem from going into the rim (See diagram).



## 4. Thread inflator onto valve stem

Turn inflator head clockwise until it is all the way on the valve.

**\*IMPORTANT:** Presta valve **MUST** be opened before inflating tire.

Failure to open valve completely may cause injury or damage to inflator.

## 5. Open inflator valve to fill

Turn inflator valve counter-clockwise to release CO<sub>2</sub> into tire. The more you rotate, the faster the inflation.

\*Hold CO<sub>2</sub> cartridge upright for best results.



## 6. Close inflator valve when finished

Turn inflator valve clockwise until it is fully closed to stop the flow of CO<sub>2</sub>

**\*CAUTION:** CO<sub>2</sub> cartridge must be completely empty before removal from inflator. Removing an activated cartridge from an inflator is dangerous! Do not over-inflate tire as injury can result. To remove inflator, unscrew the inflator head from the tire valve.