

IMPORTANT:

PLEASE COMPLETELY UNDERSTAND ALL USER INSTRUCTIONS AND SAFETY INFORMATION BEFORE USING THIS PRODUCT. AS WITH ANY HIGH TECH PRODUCT YOU WILL NEED TO ROUTINELY CHECK FOR LOOSE HARDWARE, CRACKS OR OTHER DAMAGE AND REPLACE ITEMS AS NECESSARY. DO NOT USE PRODUCT IF ANY OF THESE CONDITIONS EXIST.


CAGE HARDWARE

M5 x 12mm Socket Head Screw	M5 x 14mm Socket Head Screw	M5 x 16mm Socket Head Screw	M5 Flat Washer (x2)	M5 Nylon Washer	M5 Nylon Spacer	M5 Nylon Insert Lock Nut (x2)	M5 x 12mm Button Head Flange Screw (x2)


CLAMP HARDWARE

TOOLS REQUIRED

- 3mm Hex Wrench
- 4mm Hex Wrench
- 8mm Open Ended Wrench
- Torque Wrench up to 35 in lbs (4.0 Nm)

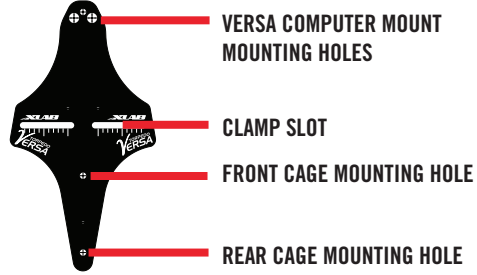


1. Remove the Versa mounting plate, clamps, and hardware from the packaging.
2. Take the cage you will be using and place the M5 x 12mm Socket Head Screw through an M5 Flat Washer, through the front hole in the cage, through the front cage mounting hole, and into one of the M5 Nylon Lock Nuts. Thread the screw into the nut using the 4mm Hex Wrench and 8mm Open Ended Wrench.

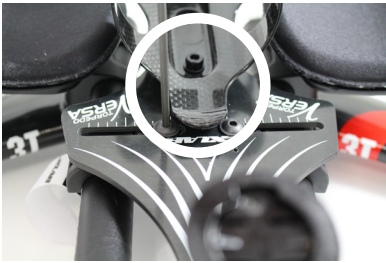

6. Repeat with the remaining M5 x 12mm Button Head Flange Screw and mounting clamp using the other slot in the Versa Mounting Plate.
7. Place the mount on the aerobars by pressing each of the mounting clamps onto the extensions. The mounting clamp is designed to expand around the extensions and snap in place. Ensure the clamp is completely touching the extensions.
8. Center the mounting plate and hand tighten each of the screws.



3. Repeat for the rear screw using the following configurations:

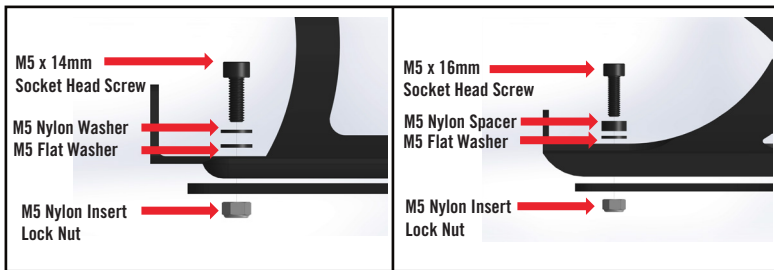


4. Tighten both cage screws down and torque to 35 in lbs (4.0 Nm).

5. Place one of the M5 x 12mm Button Head Flange Screws through one of the slots in the Versa Mounting Plate, and into one of the mounting clamps. Loosely thread the screw into the clamp with the 3mm Hex Wrench so that the clamp can still move.



9. Secure the Velcro straps by routing them through the clamps. Pull the straps as tight as possible and attach them in place.

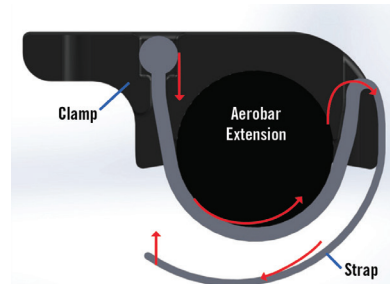

10. Tighten both mounting clamp screws and torque to 35 in lbs (4.0 Nm).

PLEASE NOTE: WHEN USING A TORPEDO REFILL BOTTLE, IT IS RECOMMENDED TO USE A XLAB TORPEDO OR VEE CAGE. NOT ALL NON-XLAB CAGES WILL WORK WITH A TORPEDO REFILL BOTTLE.