

**TOOLS REQUIRED:**

4 mm Hex wrench (3 mm for DELTA SONIC XL/ML)  
Torque wrench with 4 mm Hex Tip (3 mm for DELTA SONIC XL/ML)



**HARDWARE (not included)**



**COMPATIBILITY:**

This product is only compatible with XLAB single rear carriers with a metal mount. Do not use on **DELTA 100, 105, 200 or 225**, this may cause damage to the mount and void your warranty. This product is also not compatible with the XLAB **MULTI-STRIKE REPAIR HOLDER**  
**Note:** For **DELTA 400/425/430** models, please view the instructions online for the recommended hardware and mounting instructions.

**IMPORTANT:**

**PLEASE COMPLETELY UNDERSTAND ALL USER INSTRUCTIONS AND SAFETY INFORMATION BEFORE USING THIS PRODUCT. AS WITH ANY HIGH TECH PRODUCT YOU WILL NEED TO ROUTINELY CHECK FOR LOOSE HARDWARE, CRACKS OR OTHER DAMAGE AND REPLACE ITEMS AS NECESSARY. DO NOT USE PRODUCT IF ANY OF THESE CONDITIONS EXIST.**

**ESSENTIAL TIPS:**

- ALWAYS TWIST THE BOTTLE AS YOU PULL IT FROM THE CAGE.** Pulling the bottle straight out or to the side will increase the force needed.
- **ADJUST** the angle of your **DELTA** system for easiest bottle withdrawal.
- **TO LOOSEN THE BOTTLE GRIP, LEAVE A FULL BOTTLE IN THE CAGE OVERNIGHT.**
- Do not overstuff the bag - this can force the bag in the way of the bottle and make it difficult to fit.
- **DO NOT** use oversize bottles larger than 75 mm in diameter.



**INSTALLATION: DELTA 300**



The stock screws that come on the **DELTA 300** will not be long enough to accommodate the **AERO POUCH 300**. Obtain a new pair of M5 x 22 mm Socket Head Screws - visit XLAB to purchase.

1. Using the 4 mm Hex wrench, remove the two M5 x 15 mm Socket Head Screws holding the cage to the **DELTA 300** mount.
2. Place the cage inside the **AERO POUCH 300** and slide each of the M5 x 22 mm Socket Head Screws through an M5 steel flat washer, then the cage and the pouch. See **Figure A**.
3. Loosely install back on to the **DELTA** mount.
4. Using the Torque wrench, torque the bottom screw to 4.0 Nm (35 in-lbs). Hand tighten the top screw with the hex wrench as much as possible.

**Figure A**

## INSTALLATION: DELTA SONIC XL/SONIC ML

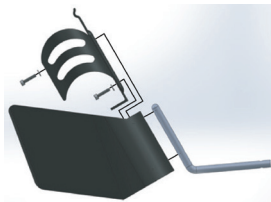


Figure B

The stock screws that come on the **DELTA SONIC** will not be long enough to accommodate the **AERO POUCH 300**. Obtain a new pair of M4 x 18 mm Socket Head Screws - visit XLAB to purchase.

1. Using the 3 mm Hex wrench, remove the 2 M4 x 12 mm Socket Head Screws holding the cage to the **DELTA SONIC** rod.
2. Place the cage inside the **AERO POUCH 300** and slide each of the M4 x 18 mm Socket Head Screws through an M4 Steel Flat Washer, then the cage and the pouch. See **Figure B**.
3. Loosely install back on to the **DELTA** rod.
4. Using the Torque wrench, torque the bottom screw to 4.0 Nm (35 in-lbs). Hand tighten the top screw with the Hex wrench as much as possible.

**Note:** For **DELTA 400/425/430** models, please view the instructions online for the recommended hardware and mounting instructions.

## WARRANTY:

Limited 3 Year. See website for details.